
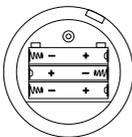


**E-zzy**  
THE SLOTH

 **whisbear**<sup>®</sup>  
FOR PEACEFUL SLEEP

**EN** USER GUIDE

## 1 INSTALL AND CHARGE THE DEVICE

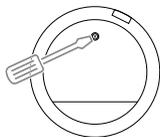

**WARNING:** using non-rechargeable batteries may damage the device or even result in a fire or an explosion!

AAA x 3

RECHARGEABLE



CHARGER


## 2 TURN THE DEVICE ON AND SET VOLUME LEVEL



Press briefly to start soothing sound




Press and hold to turn up the volume

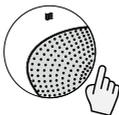

Release the button when the volume is right




Press and hold again to turn down the volume

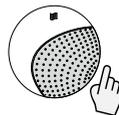

Release the button when the volume is right


## 3 TURN THE CRY<sub>sensor</sub> FEATURE ON AND OFF

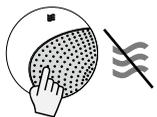

Turn the device off (sound inaudible)



Press and hold for about 3 sec until you hear a beep

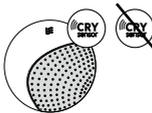

CRY<sub>sensor</sub> has been switched on or off

## 4 HOW CRY<sub>sensor</sub> WORKS



soothing sound 45 min



0 CRY<sub>sensor</sub> 3h → AUTOMATIC SWITCH OFF



0 CRY<sub>sensor</sub> 3h →

soothing sound 45 min



0 CRY<sub>sensor</sub> 3h → AUTOMATIC SWITCH OFF

## 5 APP


**THE WHISBEAR® APP ALLOWS YOU TO:**

- Turn the soothing sound on and off
- Select the sound's duration
- Adjust the sound volume
- select the sound's type

**WITH PARENT'S ASSISTANT YOU CAN:**

- save your child's milestones in the calendar
- save and analyze child's activity statistics over a day/week/month
- write a diary of your child's activity
- read paediatrician's advice

**IMPORTANT:** other features and functions of the Whisbear® App are available at [www.whisbear.com](http://www.whisbear.com)

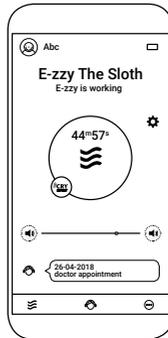

**Requires 3 AAA rechargeable batteries to use. Batteries not included.**



**WARNING:** using non-rechargeable batteries may damage the device or even result in a fire or an explosion!



**DOWNLOAD  
WHISBEAR® APP**

## INTRODUCTION

You're holding a unique, multi-functional parent assistant: **E-zzy the Sloth**. E-zzy combines three different devices: it is a soothing sound emitting device, sleep monitor and parent's personal assistant. Everything you need in one soft, plush sloth. We realize that parenthood is not exactly a bed of roses, but with E-zzy on your side you'll see that it can be easier.

**Parenthood is complicated – make it E-zzy!**

---

### TABLE OF CONTENTS

#### INTRODUCTION 4

#### WARNING 5

#### TECHNICAL SPECIFICATION 6

- Package contents 6
- Technical data 8
- Service access area 8
- Operator access area 8
- Tool 8
- Electrical rating: 8
- Other 8

#### STARTING THE SOOTHING DEVICE 9

- Charging 9
- Using the device with CRYsensor feature off 9
- Using the device with active CRYsensor feature 10
- Turning the CRYsensor feature on and off 10
- Adjusting volume on the device 11

#### USING A DEVICE WITH THE WHISBEAR® APP 11

- Bluetooth® connection 11
- Switching the soothing device with the app 11
- Whisbear® app settings 12
- Installing the device in the toy 12

#### PROBLEM-SOLVING GUIDE 12

#### CARE INSTRUCTIONS 13

#### RECYCLING INFORMATION 13

#### USER GUIDE 13

#### SIMPLIFIED EU DECLARATION OF CONFORMITY 14

#### WARRANTY 14

**WARNING!**

Please read the safety recommendations carefully before using the device and the toy.

Ignoring the rules may be dangerous or illegal. Read this manual carefully for important safety information and operating instructions before using this toy.

- Keep these instructions for future reference, as they contain important information.
- If the toy is installed in a crib, bed, or pram, remove the toy to avoid the risk of a possible injury due to the child getting entangled when they start making the first attempts at crawling. Always fasten the Velcro opening completely to protect your child from contact with the soothing device.
- Remember that the device and the USB cord are not toys! To avoid injury, don't leave the device and/or the USB cord near children unattended!
- Make sure the batteries are placed in correct positions (+/-). Keep batteries outside children's reach. Use only the rechargeable batteries. Don't mix different types of batteries, or new and old batteries of the same type. Remove the batteries if you're not using the device for a long time. Exhausted batteries should be charged, or removed from the toy if they are damaged. The supply terminals are not to be short-circuited. Do not throw exhausted batteries into the household waste; turn them in at a local recycling point.
- Do not overheat batteries or expose them to extreme cold (below 0°C/32°F or above 4°C/104°F), sunlight, or other heat sources. Extreme temperatures may affect battery life. Contact with liquids and metal objects may damage the battery. Do not destroy, damage, or dispose of this product in a fire – it may be dangerous, cause an explosion and fire.
- Do not use non-rechargeable and/or alkaline batteries. They can damage the device or cause fire or explosion of the battery and the device.
- Keep the batteries away from children. Rechargeable batteries should only be charged and replaced by an adult.
- When opening the battery compartment, keep sharp tools and screws outside children's reach!
- IMPORTANT: Always consider your child's safety!
- Check all elements of the product before use to ensure there are no potential deficiencies or threats to your child's safety and health. If you notice any deficiency, immediately stop using the product and contact the manufacturer.
- Do not turn on the toy in locations where using electronic devices is forbidden, or where the device may cause interference or other accidents.
- Follow any and all instructions, rules, and warnings issued by the personnel employed at the place where you want to use the toy or the device.
- Do not turn on the toy or the device or use it near flammable materials.
- Cords and plastic wrap elements of the packaging may be swallowed by children, which may lead to choking and suffocation – keep them away from children.
- Children of all ages can use the toy, but when the sound producing device is installed, it is recommended not to leave children unattended.
- The toy includes magnets or magnetic elements. Magnets attached to each other or to a metal object when introduced to a human body may cause serious or lethal injury. In case of swallowing a magnet or introducing them to airways, immediately call 911.
- The soothing device emits electromagnetic waves at 2.4 GHz frequency. Other wireless devices may interfere with the toy's operation.

- The manufacturer shall not be liable for audio or video interference caused by self-made modifications or by using cords or chargers other than that supplied with the product.
- Charge the device away from children.
- Before charging the device, remove it from the toy and always charge it on a flat surface.
- Stop charging the device if you see any signs of a possible malfunction.
- To avoid electric shock, do not immerse the device in water or other liquids.
- Do not shake or hit the device.
- Do not use the product if it is malfunctioning, has been dropped or damaged.
- Do not use the product for purposes other than those for which it was intended.
- The device is not water-resistant. Do not expose it to water or other liquids.
- Exposing the toy and/or device to water or other liquids may affect the life and work of electronic components.
- Don't use the toy or the device in very humid or dusty environments, because water or dust particles may filter into the device and affect its electronic components, damaging or ruining the device.
- Keep away from intense sunlight and do not use near other devices that produce a lot of heat.
- Don't use the device's highest volume setting for a prolonged time and do not put your ear directly to the device when it's working.

## TECHNICAL SPECIFICATION

### PACKAGE CONTENTS

- E-zzy the Sloth plush toy
- One soothing device
- USB cord
- User guide




.....

If any of the above is missing or damaged, contact the seller or the manufacturer.

Please keep the original packaging in case the product must be returned.

**The packaging is not part of the toy.**  
**Remove all elements of the packaging before giving the toy to a child.**

The product's appearance (shape and colors) may differ from the pictures presented in the photos and drawings in the manual.

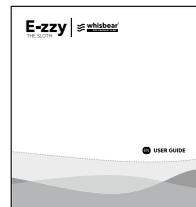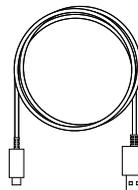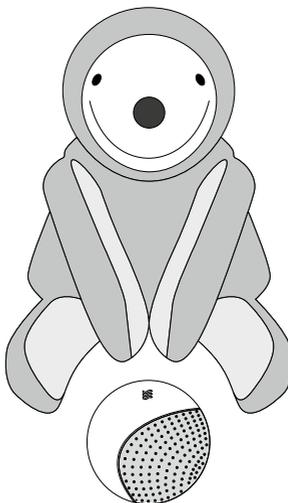

## **TECHNICAL DATA**

MODEL	E-zzy by Whisbear® ver.1 (FCC ID: SQK-7BLZXX)
Using the device	Pressing the button once switches the noise on or off More than 5 such cycles per minute are not recommended. The device enables manual control with the button.
Wireless communication	Bluetooth® Low Smart Energy model MBH7BLZ07 made by Fujitsu Component Ltd
Compatibility	Smartphones, tablets with Bluetooth® technology.
Ports	The USB port is an exposed conductive part of the device.
Sound	The sound is produced by a speaker installed in the device, with 8 Ohm impedance.
Microphone	The device is equipped with a microphone that analyses environmental sounds so that the <b>CRY</b> sensor mode can function. The sounds are processed in real time and are not saved or stored.
Battery type	<p>The device is designed to work with AAA rechargeable batteries. The device is designed to recharge batteries.</p> <p><b>General energy supply information:</b> the device is powered with rechargeable batteries batteries with the following specifications have been selected:</p> <ul style="list-style-type: none"><li>• Rated voltage: 3.6V</li><li>• Battery type: NiMH</li><li>• Battery size – AAA/LR03</li><li>• Number of voltaic cells arranged in series: 3 pcs</li><li>• Single cell rated voltage 1.2 V</li><li>• Rated cell capacity: 900mA<ul style="list-style-type: none"><li>» Reverse polarity protection</li><li>» The device may be charged with a USB port</li></ul></li></ul> <p><b>Charger specs:</b></p> <ul style="list-style-type: none"><li>• supply voltage: 4.75V – 5.25V</li><li>• Nominal charge current: 190mA</li><li>• Source maximum current capacity: 500 mA</li><li>• Overcharging protection</li><li>• Overheating protection</li><li>• Current relay (7h)</li></ul>

Work time	Built-in software allows for maximum work time of the device: 90 minutes of continuous noise emission 180 minutes in the stand-by mode ( <b>CRY</b> sensor mode active) The suggested batteries allow the device to work: Maximum idle work time: 250h Maximum stand-by ( <b>CRY</b> sensor) work time: 80h Maximum active work time (producing soothing sound): 7.5h
Battery Charging	Using the device while charging is not recommended. In particular, switching the soothing sound on, changing the soothing sound's settings, or remote access to the device.
Additional information:	The device is designed to be routinely moved around. Class III Device compliant with PN-EN 60950-1:2007. The voltage of the device does not deliver electric shock. During normal use, without applying tools, the user can access the control button (on the casing) and the USB port (to charge the batteries that supply power for the device).
Net weight	67 g

### **SERVICE ACCESS AREA**

After removing the top element of the casing, service staff gain access to all the systems that make the device, even if the device is working. Disassembly of the lower section of the casing requires disconnecting the device from the power supply.

### **OPERATOR ACCESS AREA**

The battery compartment is the device's operator access area. Accessing the area requires a tool.

### **TOOL**

Removing the cover plate of the battery casing requires a PH1 Philips screwdriver.

### **ELECTRICAL RATING:**


- Rated voltage 3,6V
- Rated voltage range 2,8 – 3,6V
- Rated current (idle/**CRY**sensor standby/soothing sound) 3/8/40 mA
- Rated frequency n/a
- Rated frequency range n/a

### **OTHER**

The casing also serves a decorative function.

## STARTING THE SOOTHING DEVICE

To operate, the device requires **THREE RECHARGEABLE BATTERIES TYPE AAA (NiMH)**. Whisbear® recommends size AAA NiMH rechargeable batteries (1.2V), but remember that the actual size of batteries produced by different manufacturers may vary even if they are the specs are the same in the documentation.

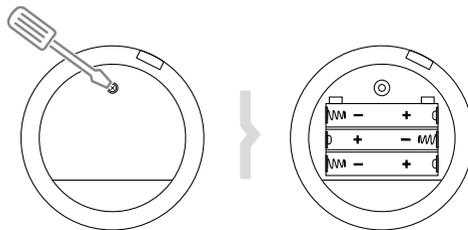

To insert or replace batteries, unscrew the screw and prise the plate open. Load the batteries into the compartment and screw the plate back. If the batteries are flat, charge them with a recommended charger by connecting it to the USB port of the soothing device.



To turn the device on or off, press anywhere on the top side of the device briefly once. The soothing device may be also switched on the same way while secured in the E-zzy's pocket.

## CHARGING

Before first use install new rechargeable batteries in the soothing device, and connect the device to a charger. Use the USB cord supplied with the product. Connect the USB cord to a charger. The charger is not included in the set. Connect the USB cord to the USB port in the device.


It takes about 2 hours to fully charge a completely dead battery. Disconnect external charger after that time. It's best to charge the device only after the batteries are completely depleted.

The device informs about depleted batteries with a short, intermittent audio signal. Low power may affect the quality and sound volume of soothing sound. If the audio quality or the volume of the soothing sound is significantly worse, replace the batteries. Use only chargers dedicated for the device. Using non-compatible chargers and cords may cause permanent damage to the battery or the device. Failure to connect the charger correctly may damage the charger or the device. The warranty does not cover damage resulting from incorrect use.

Do not leave the toy unattended while it is charging.


## USING THE DEVICE WITH CRYsensor FEATURE OFF

To turn the device on or off, press the top of the device briefly once. It will gradually automatically reduce the sound volume and turn off after about 45 minutes of work. The duration can be changed with the app.

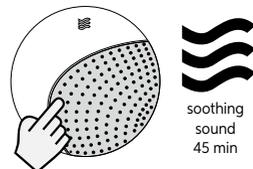

## USING THE DEVICE WITH ACTIVE CRY<sub>sensor</sub> FEATURE

The intelligent **CRY**sensor function analyzes the sound from its surroundings and it is particularly sensitive to a baby's cry. Soothing sound switches on automatically, when the device detects a sound and interprets it as a cry. If E-zzy the Sloth is located close to the child, the device may also switch on after detecting other loud noises that may wake the baby up, or when the baby moves rapidly.

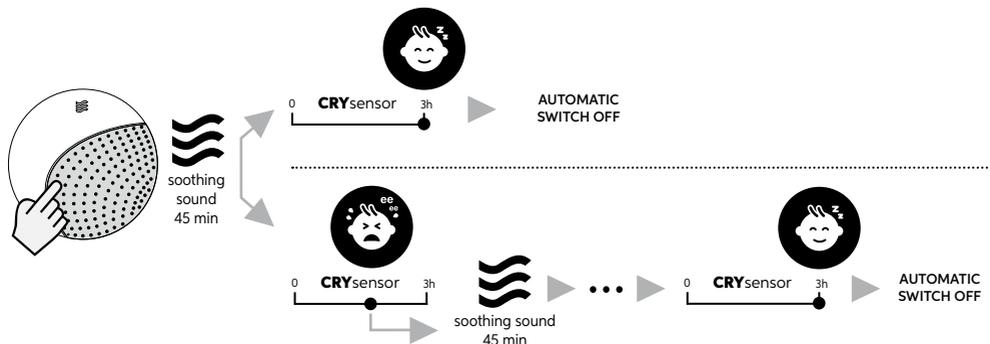

To turn the device on or off, press the top of the device briefly once. It will gradually automatically reduce the sound volume and automatically switches to the 3-hour **CRY**sensor stand-by mode.

If the baby starts crying during the 3 hours of **CRY**sensor standby mode, the device analyzes the cry for a few seconds and automatically starts soothing sound for additional 45 minutes. After that time it switches to the 3-hour long **CRY**sensor standby mode again. The cycle is repeated until the device is switched off. The device switches off automatically after 3 hours if no crying is detected or it can be switched off manually by pressing the button.

### **The default duration of soothing sound and CRY<sub>sensor</sub> stand-by mode can be changed with the app.**

Removing the batteries automatically restores the device's default settings.

## TURNING THE CRY<sub>sensor</sub> FEATURE ON AND OFF


To turn the **CRY**sensor feature on or off, when the device is off (not producing soothing sound) press and hold the button on the device for about 3 seconds. A short audio signal confirms **CRY**sensor's mode change.

## **ADJUSTING VOLUME ON THE DEVICE**


Adjust the soothing sound volume according to your baby's needs.




Press briefly  
to start soothing  
sound

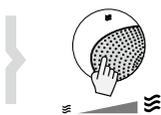


Press and hold  
to turn up the volume

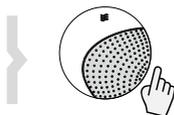

Release the button  
when the volume  
is right

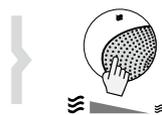

Press and hold again  
to turn down the volume

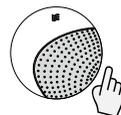

Release the button  
when the volume  
is right

To adjust volume, press and hold the button for at least 3 seconds when the device is working (producing soothing sound). The first time you do it, the sound volume increases; the second time it decreases. Pressing and holding the button for at least 3 seconds when the device is off (not producing soothing sound), switches the **CRY** sensor feature on or off.

The device remembers the selected volume value and, when switched on again, it will automatically use the last setting.

## **USING A DEVICE WITH THE WHISBEAR® APP**

### **BLUETOOTH® CONNECTION**

Turn on Bluetooth® on your mobile device and pair it with E-zzy through the Whisbear® app.

- Successful pairing is confirmed with the “E-zzy found” notification.
- You can start using E-zzy the Sloth now.

### **SWITCHING THE SOOTHING DEVICE WITH THE APP**

The basic version of the Whisbear® application manages your toy, pairing it with a Bluetooth® smart module.

At any moment only one device can be connected to E-zzy the Sloth. After severing the link, another device can connect to E-zzy as long as it is paired with it via the same account.

## **WHISBEAR® APP SETTINGS**

### **THE WHISBEAR® APP ALLOWS YOU TO:**

- **Turn the soothing sound on and off.**
- **Select the soothing sound's duration.** Available durations are: 15/25/45/60/75/90 minutes. Unless any of these options have been selected, Ezzy produces sound for 45 minutes. The app informs you of the remaining shushing time.
- **Adjust the soothing sound volume.** The app recognizes manual settings and displays them in the app screen. You can also adjust the sound volume manually, directly on the device (see ADJUSTING VOLUME ON THE DEVICE).
- **Select the sound's type.**
- **Turn the device on at specific time** (IMPORTANT: if you do not turn this feature off, the device will switch on at that time every day).
- **Turn the CRY sensor mode on and off.** The device notifies the user if CRY sensor has been manually turned on/off.
- **Set the active mode duration** for the CRY sensor.
- **Determine ambient noise level in the environment** – this option changes CRY sensor's sensitivity. Available settings: 1) quiet – CRY sensor is more sensitive to sounds (e.g. the room where the child sleeps is very quiet).; 2) loud – CRY sensor is less sensitive to sounds (e.g. the room adjacent to the child's room is noisy); 3) Default – default CRY sensor settings.

**CRYALERT** feature notifies you if a soothing sound has been switched on. If the app works in the background, the user still receives notifications.

**IMPORTANT: other features and functions of the Whisbear® App are available at [www.whisbear.com](http://www.whisbear.com)**

## **INSTALLING THE DEVICE IN THE TOY**

Insert the soothing device into the pocket in the toy and secure it by completely closing the pocket with Velcro straps. Once the device is secured inside, E-zzy the Sloth can be easily attached to the crib, pram, or car seat. The sloth's paws have sewn-in magnets, which attach to each other when you bring together two front or two hind paws.

## **PROBLEM-SOLVING GUIDE**

In case of any problems with the device, read the following tips first:

Unable to turn the device on	<ul style="list-style-type: none"><li>• To restart the device remove the batteries and insert them again.</li><li>• Charge or change the battery</li></ul>
Unable to pair the device with a smartphone.	<ul style="list-style-type: none"><li>• Check whether the smartphone Bluetooth® feature is on.</li><li>• Check if the toy is not paired with another device or assigned to another account.</li></ul>

**If the problem persists, contact the manufacturer's customer service.**

## CARE INSTRUCTIONS

To extend the product's life:

- Avoid exposing the device to liquids, because they may damage the toy's electronic components.
- Avoid exposing the toy to very high temperatures, which decrease the life of the device's electronic components, may melt plastic elements and destroy the battery.
- Do not disassemble the device. Modifications made by untrained amateurs may severely damage or destroy the device.
- REMOVE the soothing device from toy before cleaning the sloth.
- The toy may be washed manually in a maximum temperature of 30°C/86°F.
- The toy may also be washed in a washing machine in a maximum temperature of 30°C/86°F a delicate program.
- Do not wash in the washer.
- Do not bleach or use other detergents.
- Do not dry in a combo washer-dryer.
- Do not iron.
- Do not dry-clean.
- Clean the device only using a dry cloth. Don't use highly acidic or alkaline detergents.
- Use only original accessories. Breaking this rule may result in nullifying the warranty.
- The device's packaging may be recycled according to the local regulations.
- ATTENTION! The manufacturer shall not be held responsible for the consequences of any situations involving incorrect use of the toy or not following the instructions in this user's manual.

## RECYCLING INFORMATION

- Pursuant to the European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), the device is marked with the crossed-out wheeled bin symbol.
- The symbol on the product or on its packaging indicates that this product may not be treated as household waste.
- Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Failure to properly dispose of the product may result in a fine imposed according to the local law.
- Do not throw exhausted batteries into the household waste, turn them in at a local recycling point.

## USER GUIDE

**Agreements.** No part of this user manual can be copied, distributed, translated, or handed over in any way or using any means, without the manufacturer's prior consent.

**Appearance.** The photos of the toy used in the manual may differ from the real product in terms of color or size.

**Trademarks.** All brands and manufacturer names are registered trademarks or reserved registered trademarks.

## SIMPLIFIED EU DECLARATION OF CONFORMITY

Whisbear Sp. z o.o. declares hereby that the Bluetooth® Smart MBH7BLZ07 device is compliant with the 2014/53/EU Directive. The full EU Declaration of Conformity text is available at [www.whisbear.com](http://www.whisbear.com)

## WARRANTY

- The warranty period for the product is 2 years.
- The warranty is voided if the product has been used inappropriately, is misshapen or has been repaired by unauthorized persons.
- Original receipt is required for the warranty.
- Keep the user's manual for further reference

The toy is made from certified and anti-allergic textiles which are safe for children.  
Safe to use from the first day of life.

Tested by TÜV Rheinland (Shenzhen) Co., Ltd. Complies with with European New Toy Safety Directive 2009/48/EC TÜV-Reference No. 0164116401d 001 and in UL International and Instytut Łączności przy Państwowym Instytucie Badawczym in Poland.

Manufacturer Information: Whisbear Sp. z o.o. Zielona 32, 02-913 Warsaw Poland

Customer Service  
+48 506 071 902  
[app.whisbear@whisbear.com](mailto:app.whisbear@whisbear.com)  
[www.whisbear.com](http://www.whisbear.com)

Designed in European Union  
Made in China



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Whisbear Sp. z.o.o. is under license. Other trademarks and trade names are those of their respective owners.



**E-zzy**  
THE SLOTH

 **whisbear**  
FOR PEACEFUL SLEEP



**Whisbear Sp. z o.o.**

Zielona 32, 02-913 Warsaw Poland

NIP 7010481536

KRS 0000555169

REGON 36137404000000

[www.whisbear.com](http://www.whisbear.com) | [www.facebook.com/whisbear](https://www.facebook.com/whisbear)